


Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street  
 Jamestown, NY 14701  
 Phone 716.664.2232  
 Fax 716.664.1511

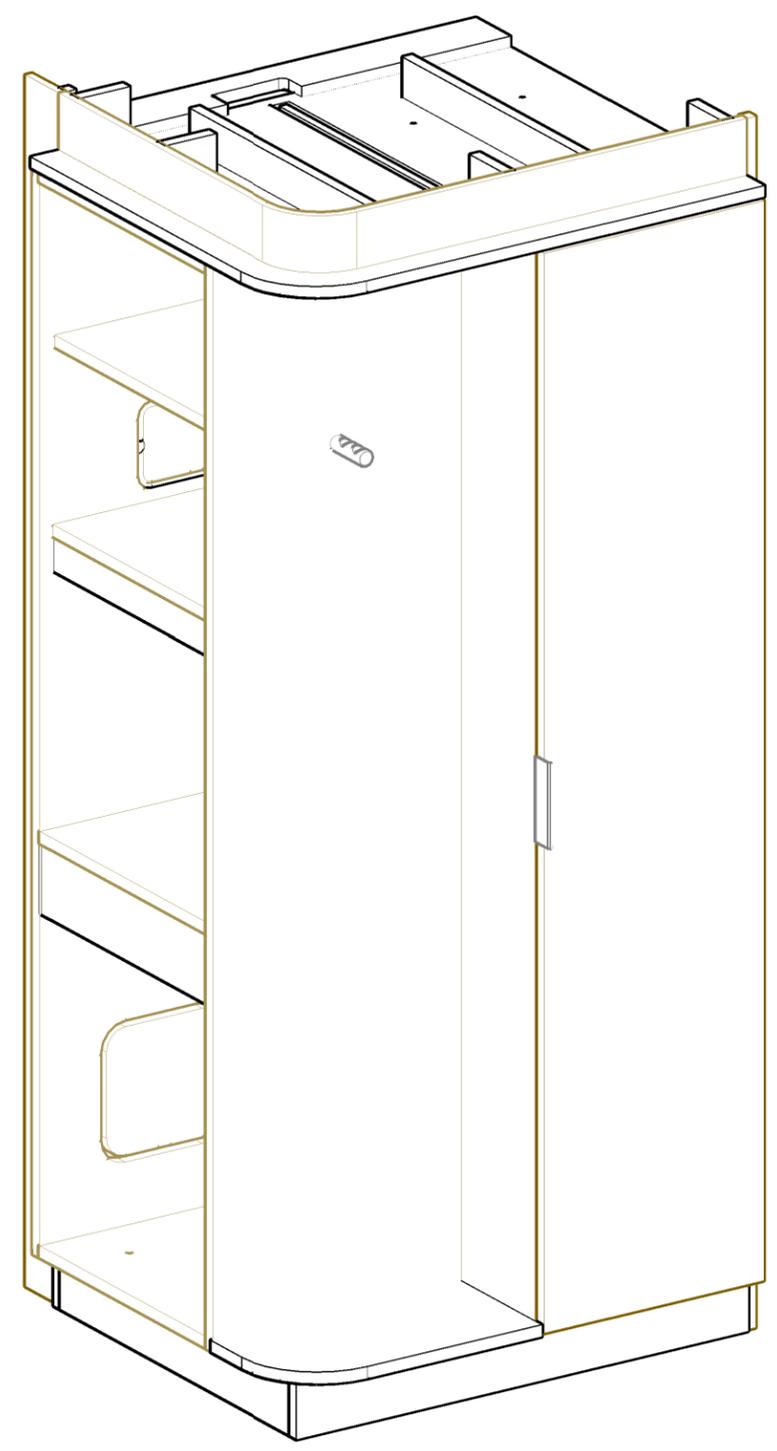


**KING WARDROBE -  
 RIGHT (K-270R)  
 (FULLY ASSEMBLED)**

Original Issue:  
 4/14/25  
 Scale:  
 AS NOTED  
 Job No.:  
 JOB #  
 Drawn:  
 AB

Drawing:  
 K-270R

**1** K-270R - KING WARDROBE (RIGHT) - FULLY ASSEMBLED  
 Scale: 1" = 1'-0"

1. LEVEL THE BASE IN PLACE
2. ALIGN THE WARDROBE TO THE BASE USING PROVIDED SCREWS

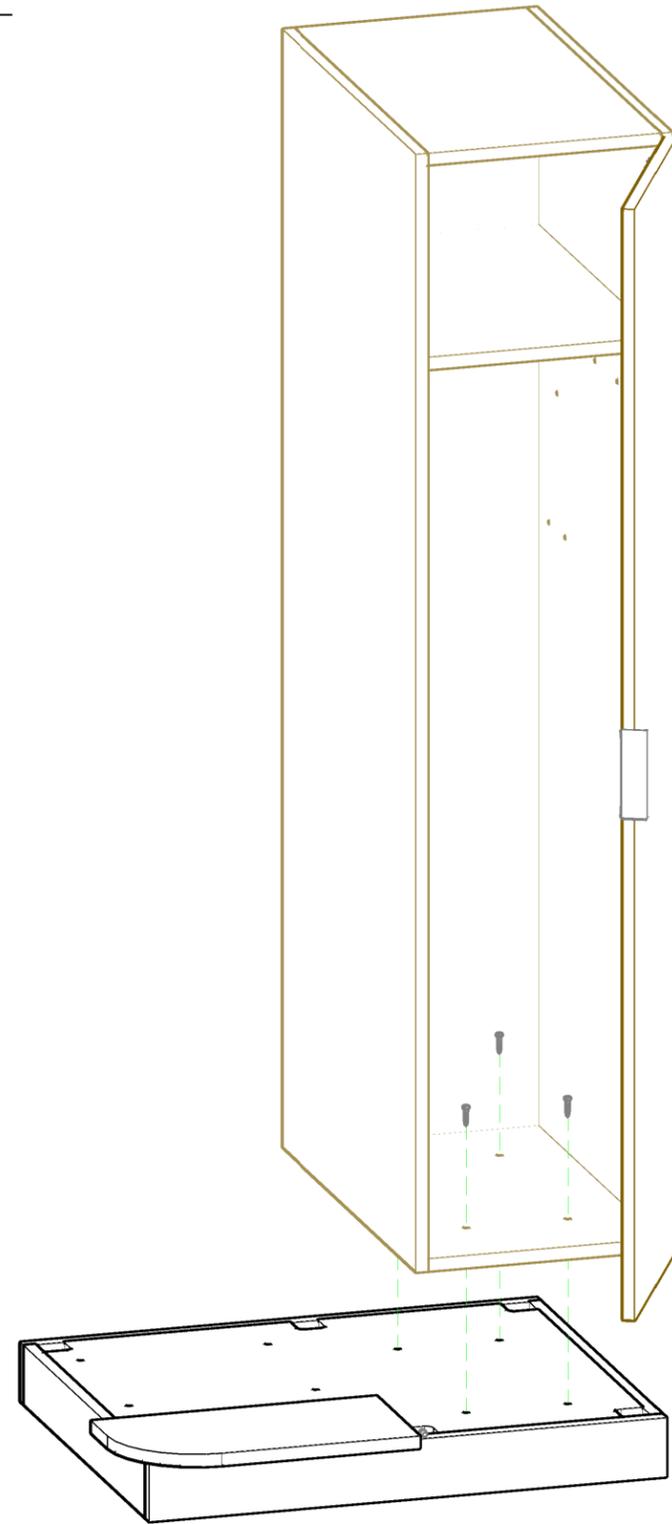

**1** STEP 1  
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street  
Jamestown, NY 14701  
Phone 716.664.2232  
Fax 716.664.1511


**ARTONE**  
FURNITURE BY DESIGN

KING WARDROBE -  
RIGHT (K-270R)  
(STEP 1)

Original Issue:  
4/14/25  
Scale:  
AS NOTED  
Job No.:  
JOB #  
Drawn:  
AB

Drawing:  
A1.1

1. ALIGN THE MICRO/FRIDGE UNIT TO THE BASE USING PROVIDED SCREWS

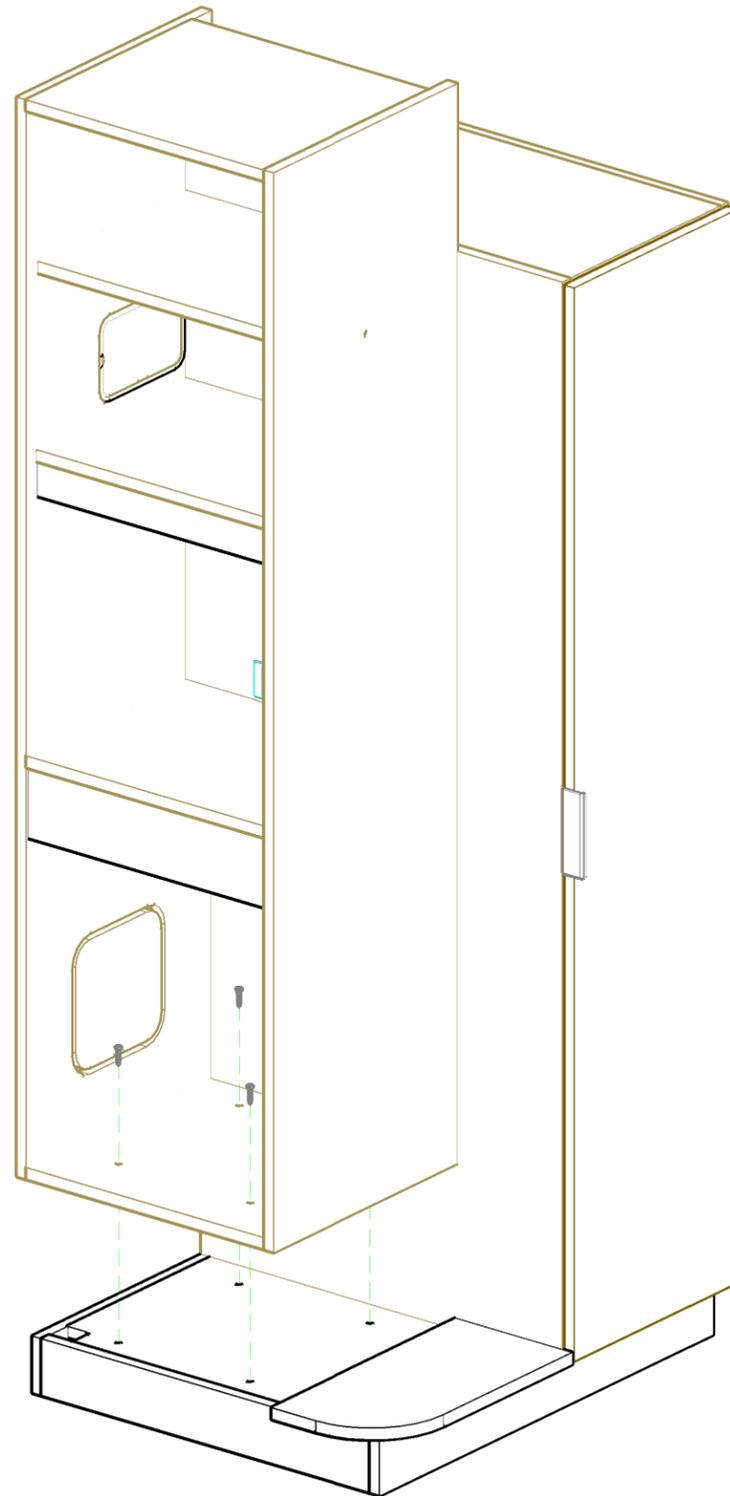

1 STEP 2  
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street  
Jamestown, NY 14701  
Phone 716.664.2232  
Fax 716.664.1511

**ARTONE**  
FURNITURE BY DESIGN

KING WARDROBE -  
RIGHT (K-270R)  
(STEP 2)

Original Issue: 4/14/25
Scale: AS NOTED
Job No.: JOB #
Drawn: AB
Drawing: A1.2

1. ALIGN CAP TO THE ASSEMBLED UNIT AND SCREW INTO PLACE USING PROVIDED SCREWS
2. ATTACH CLOSET CLEAT TO LARGER FILLER STRIP USING PROVIDED SCREWS
3. ATTACH BOTH FILLER STRIPS IN PLACE WITH PROVIDED SCREWS. THE FILLERS SHOULD BE ALIGNED WITH THE TOP FILLER



**1** STEP 3  
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street  
Jamestown, NY 14701  
Phone 716.664.2232  
Fax 716.664.1511

**ARTONE**  
FURNITURE BY DESIGN

KING WARDROBE -  
RIGHT (K-270R)  
(STEP 3)

Original Issue:  
4/14/25  
Scale:  
AS NOTED  
Job No.:  
JOB #  
Drawn:  
AB

Drawing:  
A1.3