


Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-

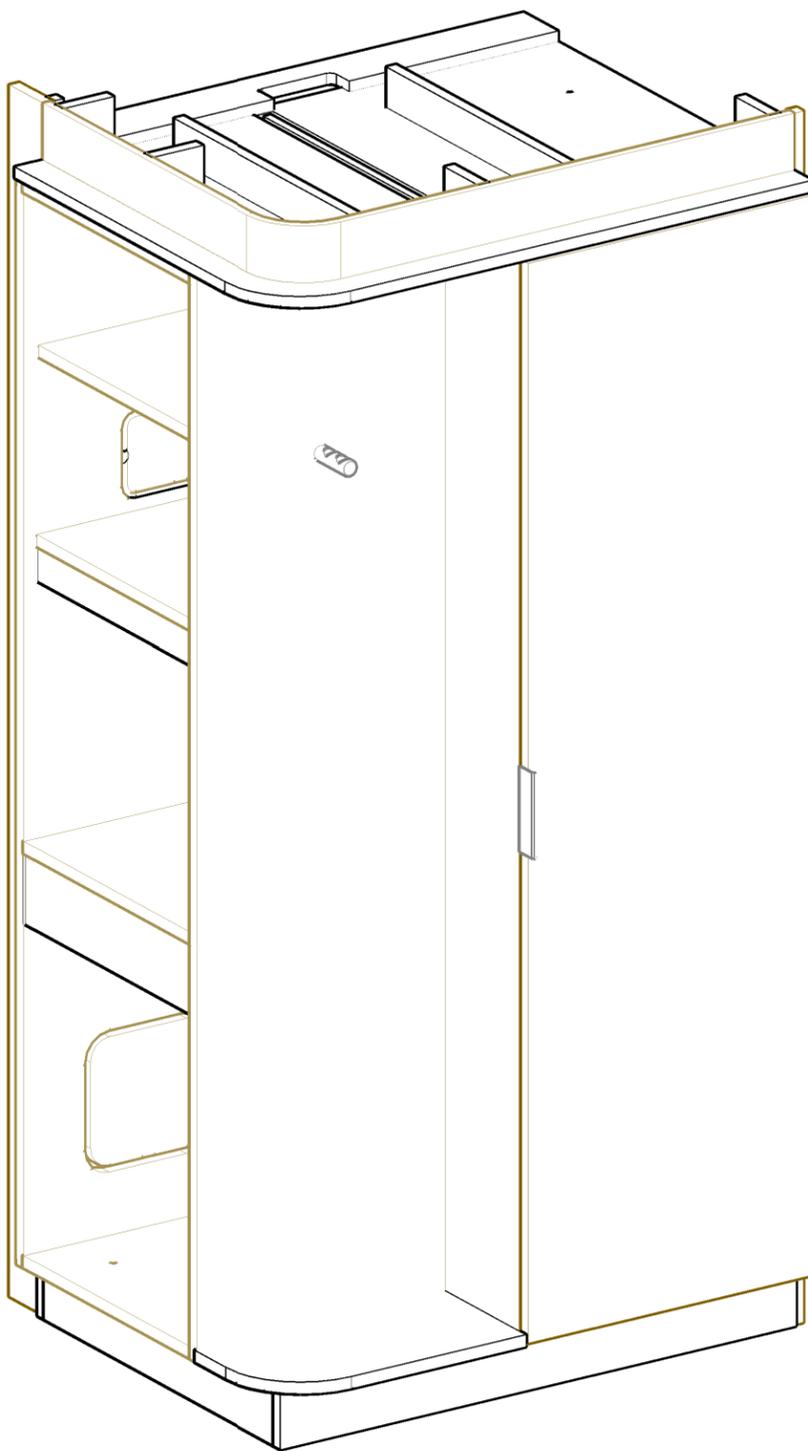

1 Q-270R - QUEEN WARDROBE (RIGHT) - FULLY ASSEMBLED
 Scale: 1" = 1'-0"




1089 Allen Street
 Jamestown, NY 14701
 Phone 716.664.2232
 Fax 716.664.1511

ARTONE
 FURNITURE BY DESIGN

QUEEN WARDROBE -
 RIGHT (Q-270R)
 (FULLY ASSEMBLED)

Original Issue:
 4/14/25
 Scale:
 AS NOTED
 Job No.:
 JOB #
 Drawn:
 AB
 Drawing:
 Q-270R

1. LEVEL THE BASE IN PLACE
2. ALIGN THE WARDROBE TO THE BASE USING PROVIDED SCREWS

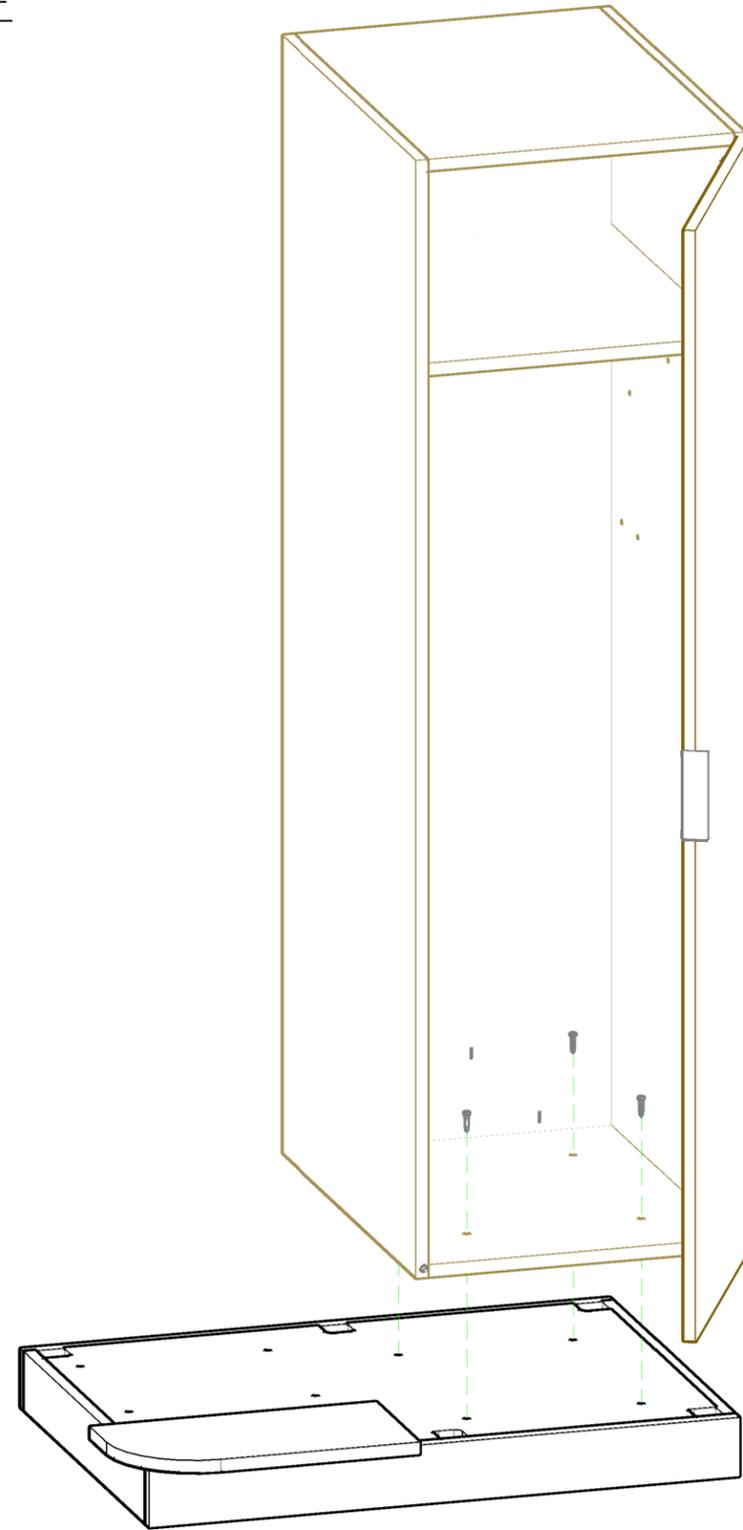

1 STEP 1
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511


ARTONE
FURNITURE BY DESIGN

QUEEN WARDROBE -
RIGHT (Q-270R)
(STEP 1)

Original Issue:
4/14/25
Scale:
AS NOTED
Job No.:
JOB #
Drawn:
AB

Drawing:
A1.1

1. ALIGN THE MICRO/FRIDGE UNIT TO THE BASE USING PROVIDED SCREWS

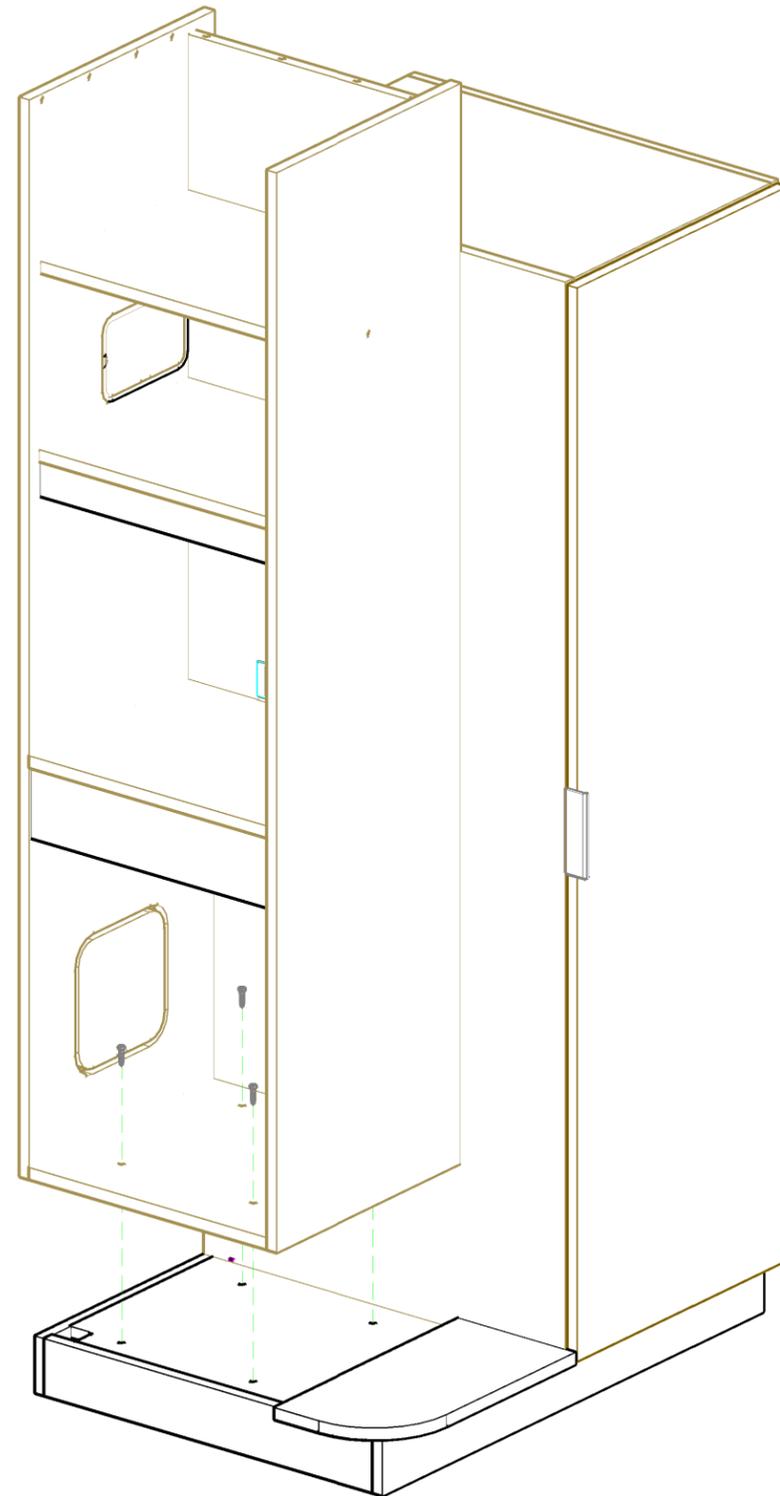

1 STEP 2
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511

ARTONE
FURNITURE BY DESIGN

QUEEN WARDROBE -
RIGHT (Q-270R)
(STEP 2)

Original Issue:
4/14/25

Scale:
AS NOTED

Job No.:
JOB #

Drawn:
AB

Drawing:
A1.2

1. ALIGN CAP TO THE ASSEMBLED UNIT AND SCREW INTO PLACE USING PROVIDED SCREWS
2. ATTACH CLOSET CLEAT TO LARGER FILLER STRIP USING PROVIDED SCREWS
3. ATTACH BOTH FILLER STRIPS IN PLACE WITH PROVIDED SCREWS. THE FILLERS SHOULD BE ALIGNED WITH THE TOP FILLER



1 STEP 3
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511

ARTONE
FURNITURE BY DESIGN

QUEEN WARDROBE -
RIGHT (Q-270R)
(STEP 3)

Original Issue:
4/14/25

Scale:
AS NOTED

Job No.:
JOB #

Drawn:
AB

Drawing:
A1.3