


Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-

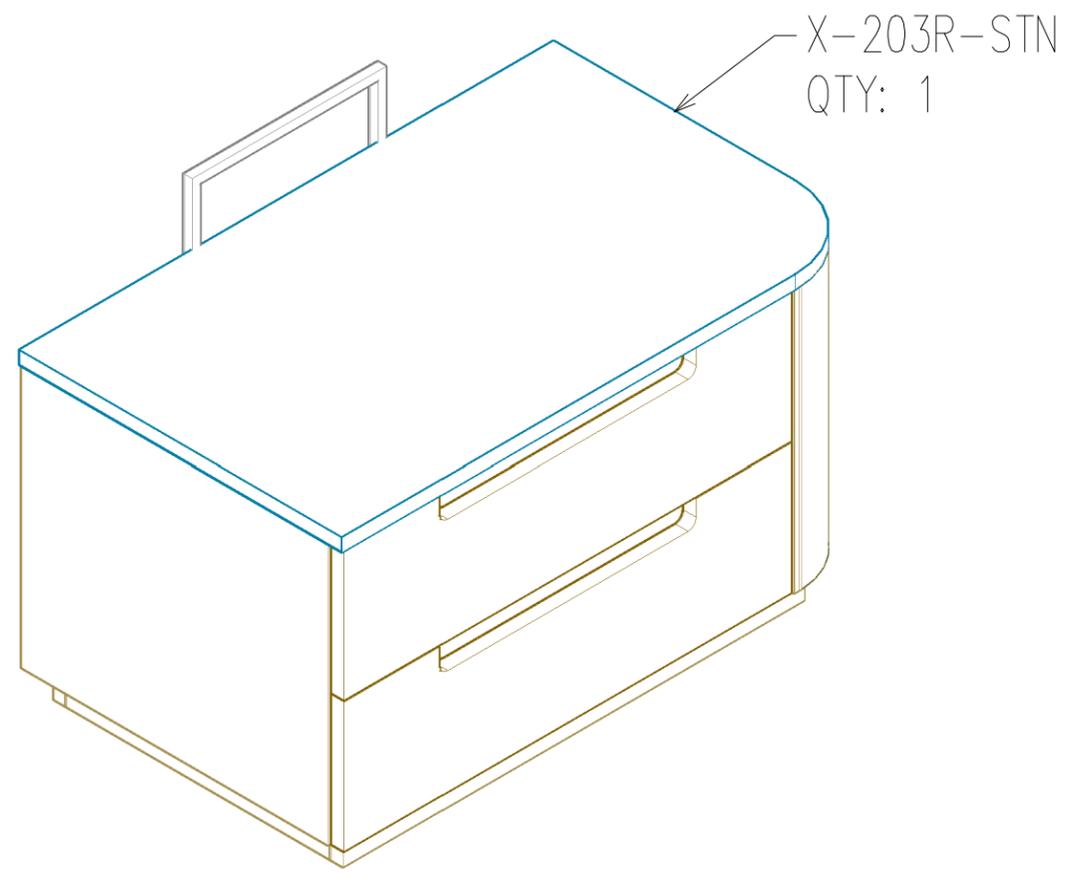

1 X-203R - LUGGAGE BENCH - RIGHT - FULLY ASSEMBLED
 Scale: 1-1/2" = 1'-0"



1089 Allen Street
 Jamestown, NY 14701
 Phone 716.664.2232
 Fax 716.664.1511


ARTONE
 FURNITURE BY DESIGN

LUGGAGE BENCH - RIGHT
 X-203R
 FULLY ASSEMBLED

Original Issue:
 4/16/25
 Scale:
 AS NOTED
 Job No.:
 JOB #
 Drawn:
 KM

Drawing:
 X-203R ASSY

1. ROTATE METAL BACKSPLASH FROM SHIPPING ORIENTATION AND ATTACH TO THE LUGGAGE BENCH AS SHOWN, USING THE SCREWS PROVIDED

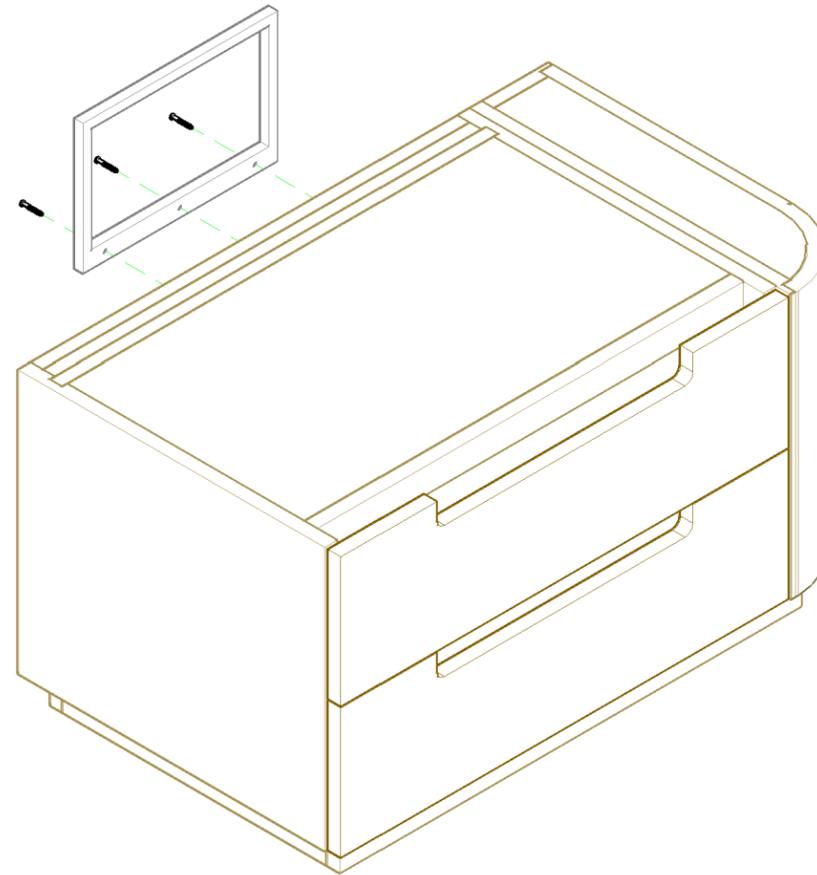

1 STEP 1
Scale: 1-1/2" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511


ARTONE
FURNITURE BY DESIGN

LUGGAGE BENCH - RIGHT
X-203R
STEP 1

Original Issue:
4/16/25
Scale:
AS NOTED
Job No.:
JOB #
Drawn:
KM

Drawing:
A1.1

1. USING SILICONE ADHESIVE PROVIDED BY THE FF&E INSTALLER, ATTACH X-203R-STN TO THE TOP OF X-203R.
2. ALLOW 24-48HRS FOR the SILICONE ADHESIVE TO CURE BEFORE USING

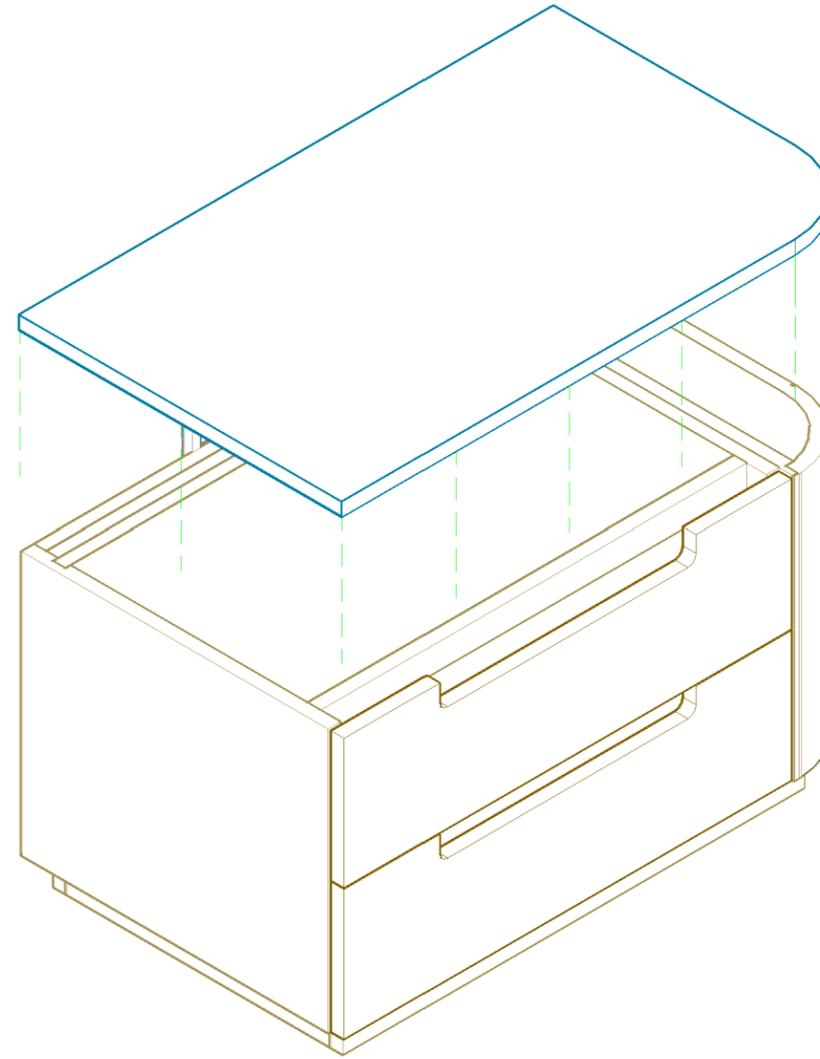

2 **STEP 2**
 Scale: 1-1/2" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
 Jamestown, NY 14701
 Phone 716.664.2232
 Fax 716.664.1511

ARTONE

FURNITURE BY DESIGN

LUGGAGE BENCH - RIGHT
 X-203R
 STEP 2

Original Issue:
4/16/25

Scale:
AS NOTED

Job No.:
JOB #

Drawn:
KM

Drawing:
A1.2