

1 X-222L/R-B - BASE KITCHENETTE - LEFT/RIGHT - FULLY ASSEMBLED Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-

Original Issue:  
5/30/25  
Scale:  
AS NOTED  
Job No.:  
SL. 416  
Drawn:  
DD  
Drawing:  
X-222-B


KITCHENETTE BASE -  
FULLY ASSEMBLED  
(X-222R/L-B)

1089 Allen Street  
Jamestown, NY 14701  
Phone 716.664.2232  
Fax 716.664.1511

**ARTONE**  
FURNITURE BY DESIGN



- POSITION THE BASE CABINETS ON THEIR BACKS AS SHOWN.
- USE 1-1/4" SCREWS TO ATTACH PLYWOOD BASE, CENTERED LEFT TO RIGHT.

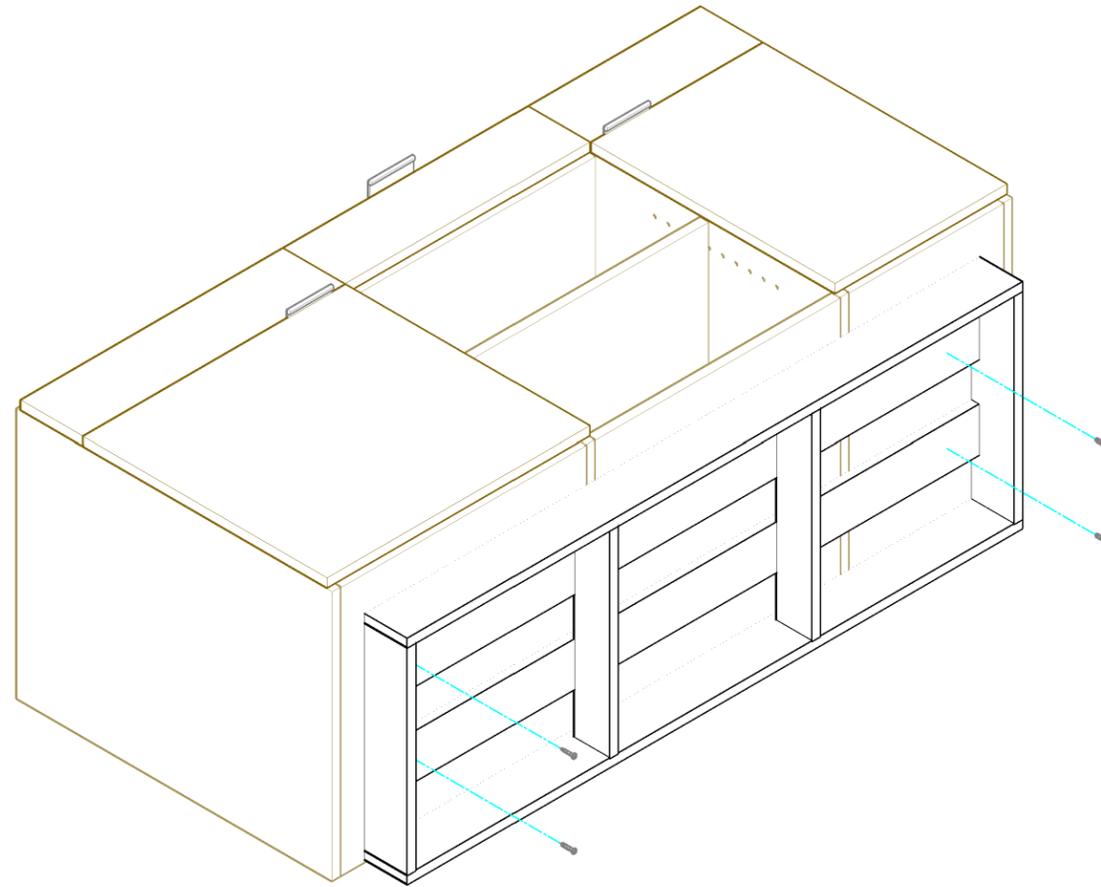

1 STEP 1  
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-




1089 Allen Street  
Jamestown, NY 14701  
Phone 716.664.2232  
Fax 716.664.1511

**ARTONE**  
FURNITURE BY DESIGN

KITCHENETTE BASE -  
STEP 1  
(X-222R/L-B)

Original Issue:  
5/30/25  
Scale:  
AS NOTED  
Job No.:  
SL. 416  
Drawn:  
DD  
Drawing:  
A1.1

— ATTACH UNIT TO WALL THROUGH NAILERS, HARDWARE PROVIDED BY INSTALLERS.

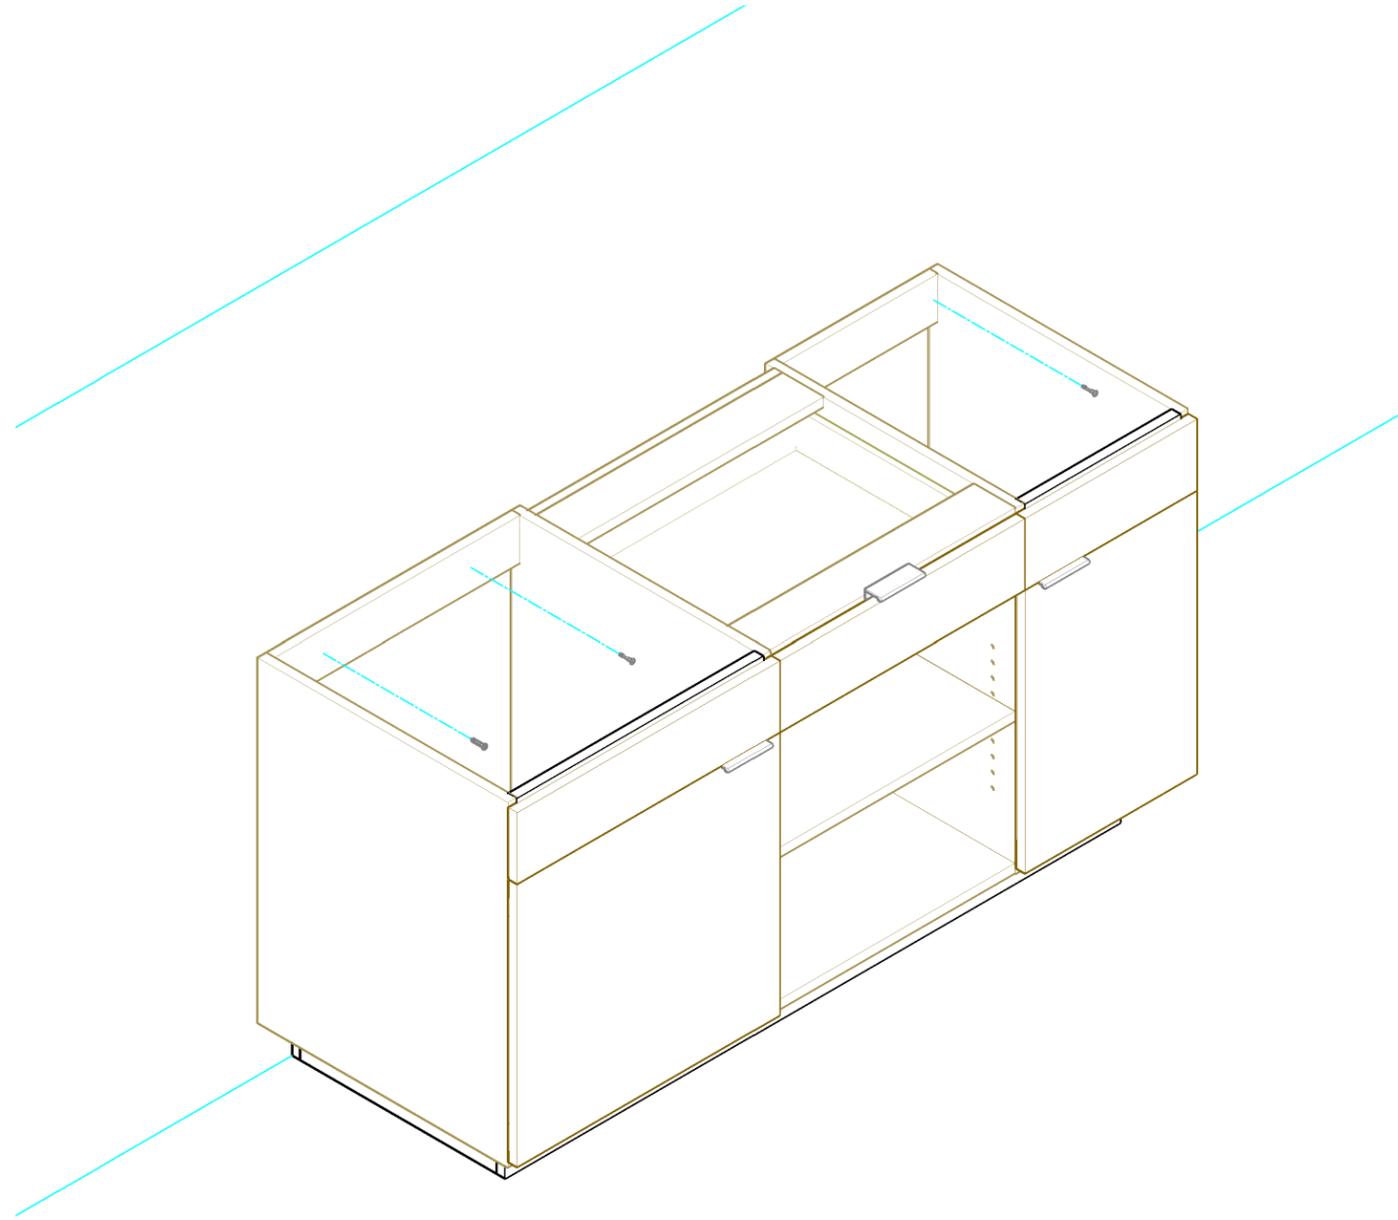

2 STEP 2  
Scale: 1" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street  
Jamestown, NY 14701  
Phone 716.664.2232  
Fax 716.664.1511

**ARTONE**  
FURNITURE BY DESIGN

KITCHENETTE BASE —  
STEP 2  
(X-222R/L-B)

Original Issue:  
5/30/25  
Scale:  
AS NOTED  
Job No.:  
SL.416  
Drawn:  
DD  
Drawing:  
A1.2