




PARTS LIST				
PART CALLOUT:		DESCRIPTION:	QTY:	BOXED?
(A)		TOP PANEL W/ FRAME	1	<input type="checkbox"/>
(B)		MIDDLE SHELF W/ CROSS BARS	1	<input type="checkbox"/>
(C)		BOTTOM SHELF W/ CROSS BARS	1	<input type="checkbox"/>
(D)		BACK PANEL	1	<input type="checkbox"/>
(E)		END PANEL	1	<input type="checkbox"/>
(F)		END PANEL W/ SCREEN	1	<input type="checkbox"/>
(G)		CLOSET ROD	1	<input type="checkbox"/>
(H)				<input type="checkbox"/>
(I)				<input type="checkbox"/>
(J)				<input type="checkbox"/>
(K)				<input type="checkbox"/>
(L)				<input type="checkbox"/>
PACKED BY:		EMPLOYEE ID#: _____		

HARDWARE LIST					
PART CALLOUT:	PART:	ARTONE PART #:	DESCRIPTION:	QTY:	BOXED?
(1)		70192	1/4-20 x 35mm CONNECTOR BOLT	2	<input type="checkbox"/>
(2)		70054	7mm x 50mm SCREW	4	<input type="checkbox"/>
(3)		XX-14427	1/4-20 x 50mm CONNECTOR BOLT	12	<input type="checkbox"/>
(4)		XX-12707	LEVELER	4	<input type="checkbox"/>
PACKED BY:		EMPLOYEE ID#: _____			



1089 Allen Street
 Jamestown, NY 14701
 Phone 716.664.2232
 Fax 716.664.1511



HARDWARE/MATERIAL
 LISTS

Original Issue:
 5/30/25

Scale:
 N/A

Job No.:
 SL.416


Drawn:
 AB

Drawing:
 HRDW/MATL

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
 Jamestown, NY 14701
 Phone 716.664.2232
 Fax 716.664.1511

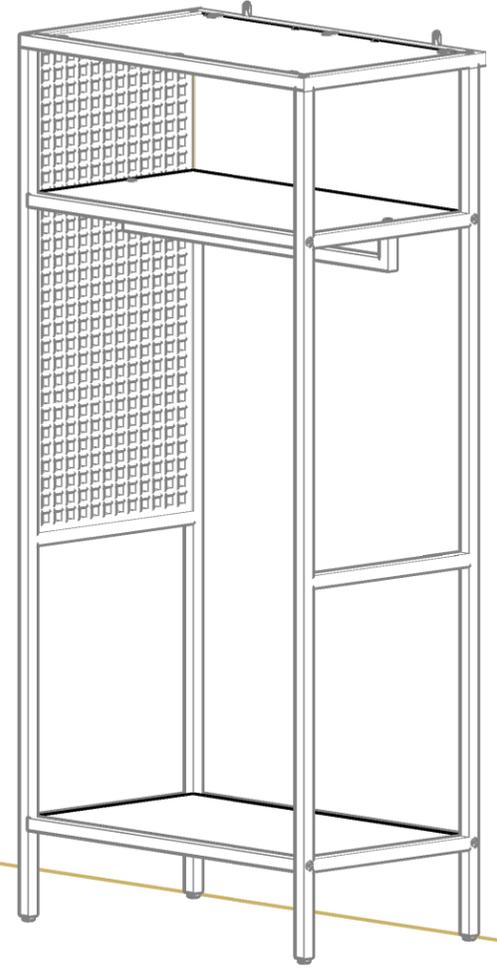

CLOSET - FULLY
 ASSEMBLED
 (X-296)


Original Issue:
 5/30/25
 Scale:
 AS NOTED
 Job No.:
 SL.416
 Drawn:
 AB

Drawing:
 X-297 ASSY

① CLOSET - FULLY ASSEMBLED
 Scale: 3/4" = 1'-0"

1. Use 4 connector bolts (Part 3) to fasten each end panel middle and bottom shelf. (Note: Parts E and F can switch for left/right configurations).
2. DO NOT tighten completely. Leave play in connection for ease of alignment
3. Insert threaded levelers (Part 4) at bottom of frames.

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-

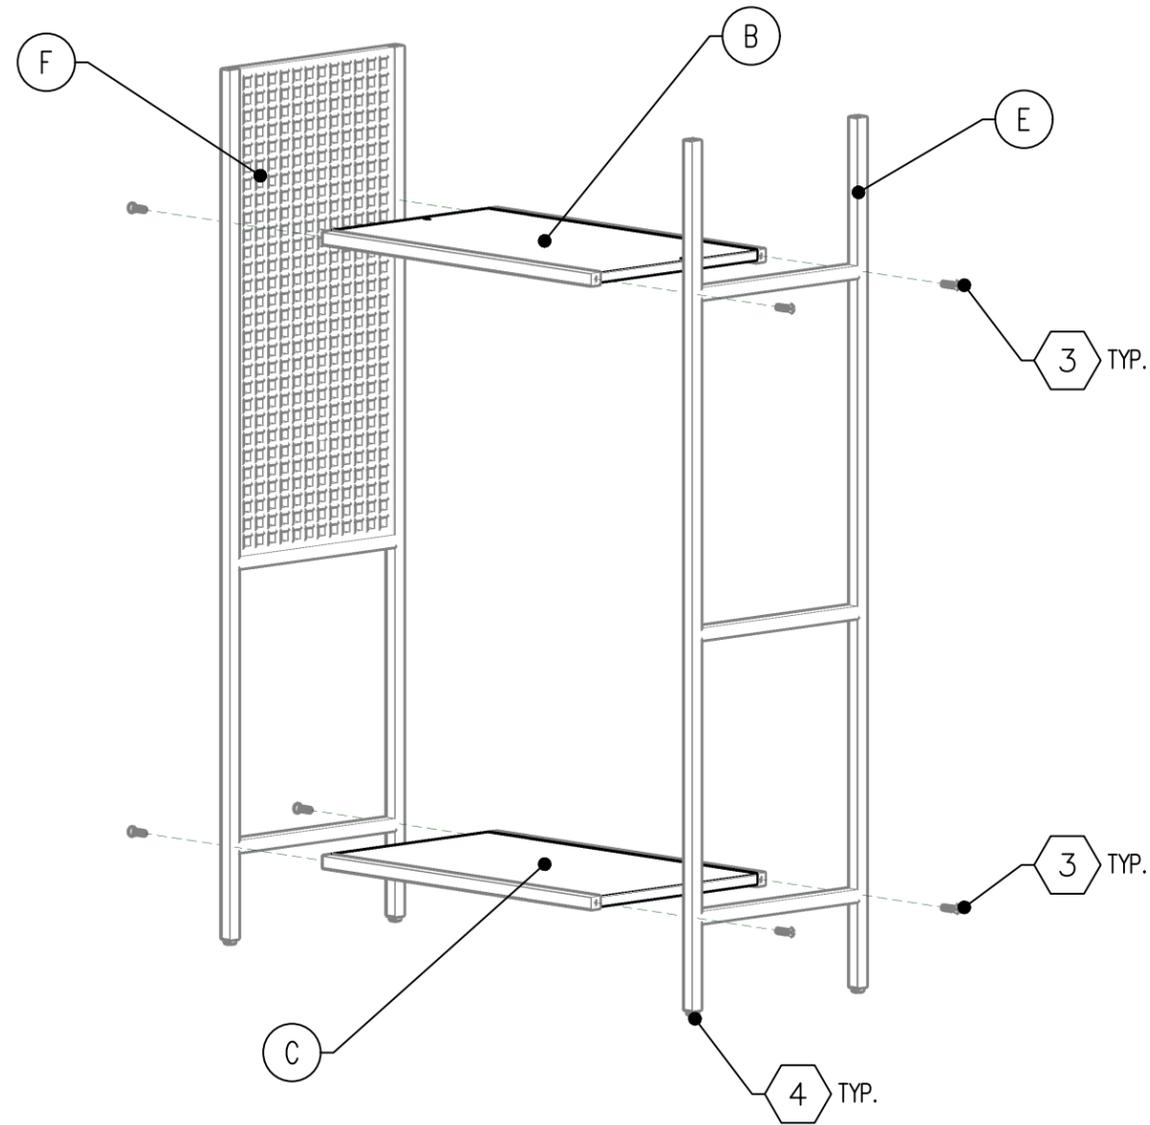

1 STEP 1
Scale: 3/4" = 1'-0"




1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511

ARTONE
FURNITURE BY DESIGN

CLOSET - STEP 1
(X-296)

Original Issue: 5/30/25
Scale: AS NOTED
Job No.: SL.416
Drawn: AB
Drawing: A1.1

1. Use 4 connector bolts (Part 3) to fasten top w/ frame.
2. Tighten all bolts completely

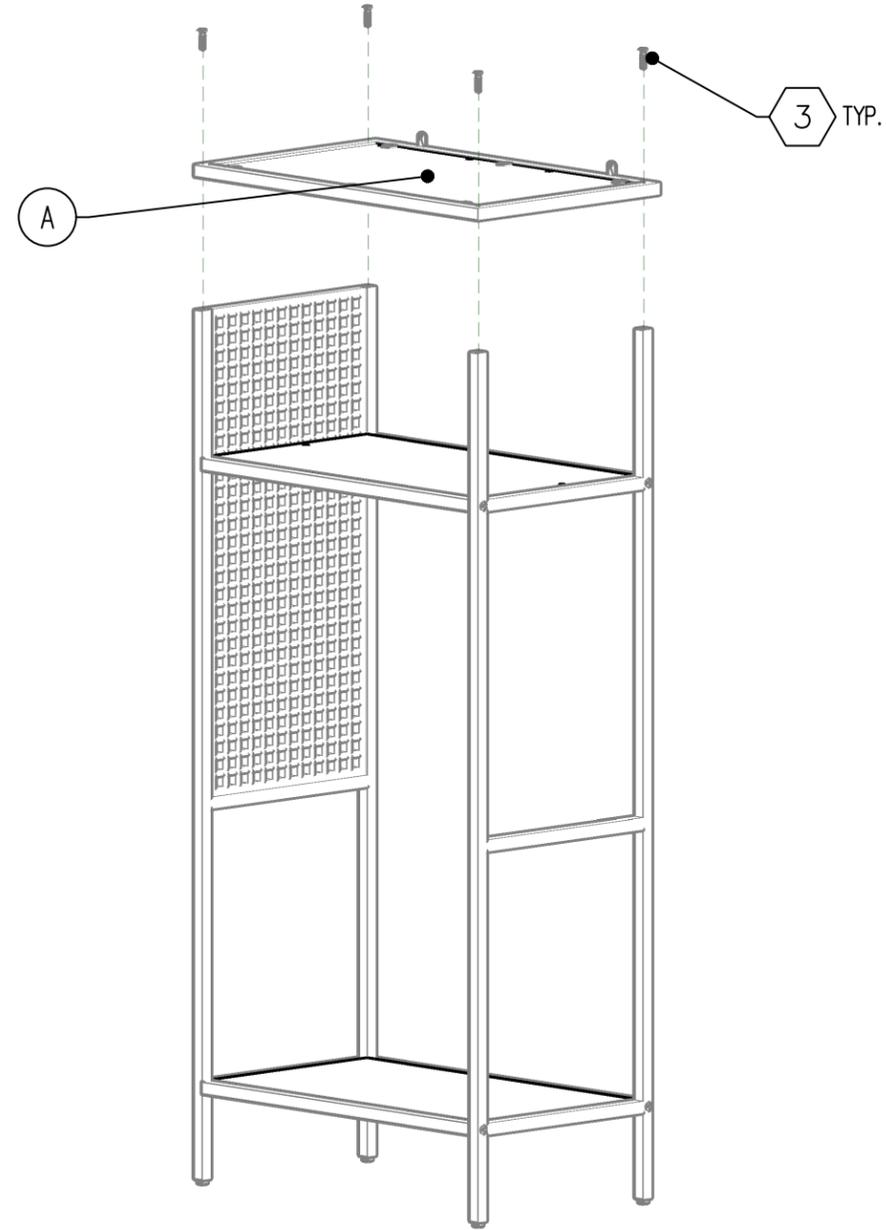

1 STEP 2
Scale: 3/4" = 1'-0"

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-



1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511

ARTONE
FURNITURE BY DESIGN


CLOSET - STEP 2
(X-296)

Original Issue:
5/30/25
Scale:
AS NOTED
Job No.:
SL.416
Drawn:
AB

Drawing:
A1.2

1. Secure back panel (Part D) with 4 screws (Part 2) in top
 - 1.1. DO NOT OVERTIGHTEN (overtightening will result in irreparable damage)

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-

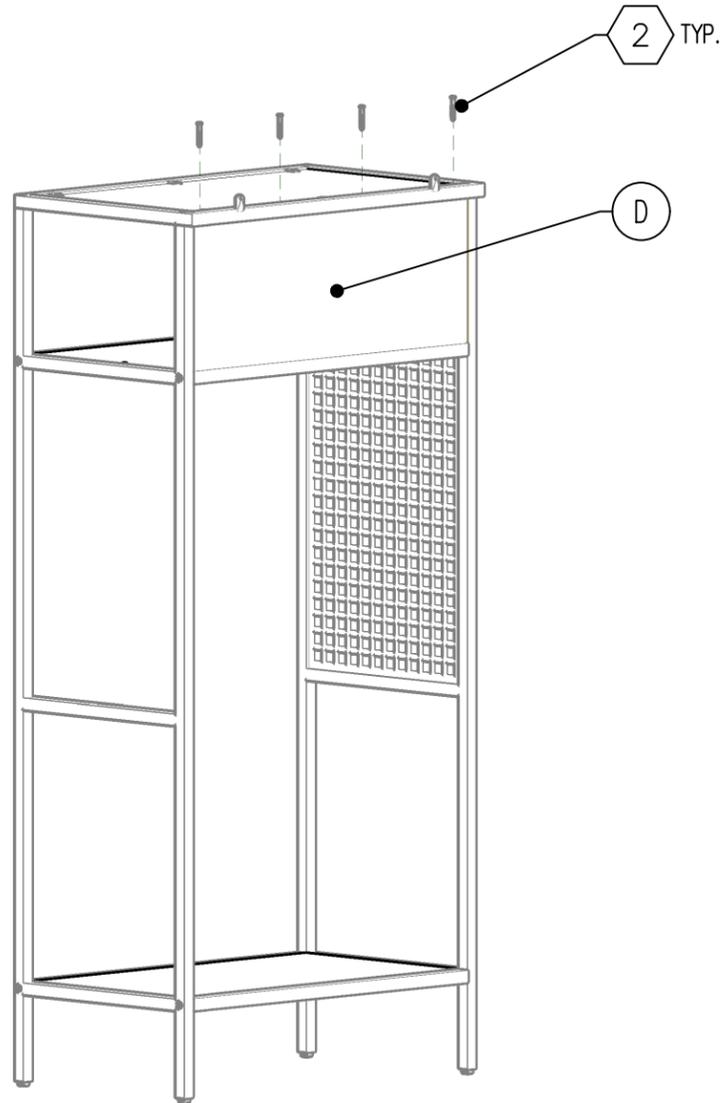

① **STEP 3**
 Scale: 3/4" = 1'-0"



1089 Allen Street
 Jamestown, NY 14701
 Phone 716.664.2232
 Fax 716.664.1511

ARTONE
 FURNITURE BY DESIGN


STEP 3

Original Issue:
 5/30/25
 Scale:
 AS NOTED
 Job No.:
 SL.416
 Drawn:
 AB

Drawing:
 A1.3

1. Use 2 connector bolts (Part 1) to fasten closet rod (Part G) thru middle shelf (Part B)
2. Level unit
3. Secure to wall blocking (Fasteners by installer)

Revisions				
No	Date	Drawn By	Checked By	Per
-	-	-	-	-

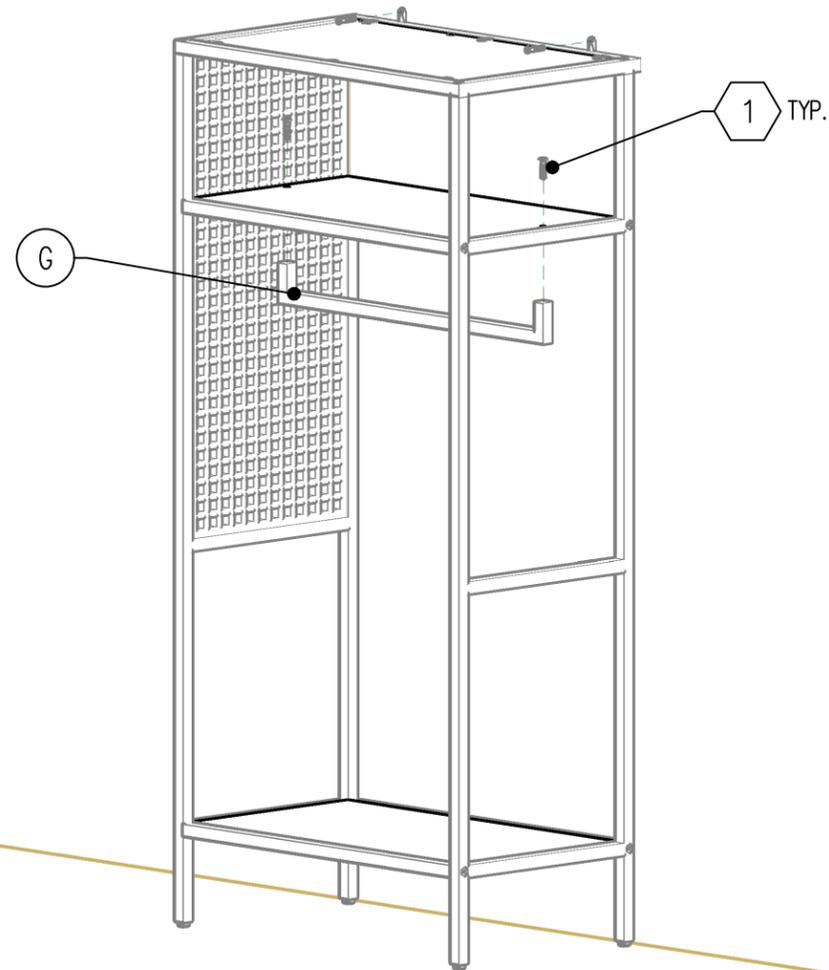

1 STEP 4
Scale: 3/4" = 1'-0"



1089 Allen Street
Jamestown, NY 14701
Phone 716.664.2232
Fax 716.664.1511

ARTONE
FURNITURE BY DESIGN

STEP 4

Original Issue:
5/30/25
Scale:
AS NOTED
Job No.:
SL.416
Drawn:
AB

Drawing:
A1.4